



Pondless Waterfall Care & Maintenance

Little care is required on a regular basis. Listed below are just a few tips to keep your Pondless Waterfall looking great throughout the season.

- Check the water level in the snorkel and add more as needed (usually every 10–14 days).
- Look for inconsistent water flow and listen for gurgling sounds indicating low water levels.
- Watch for shifting rocks or areas in a stream where water may be running over the edge. Most often you will not find a wet spot where a leak has occurred.
- Use the Ecoblast that is provided at installation and follow up with S.A.B. to keep the waterfall free from algae.
- Watch for leaves accumulating in the waterfall in the fall months as they can divert water over the edges.
- Pondless waterfalls can be placed on a timer for vacations or night/day settings. There is no ecological need to run the system continuously.
- Fast moving water will not freeze but splashing or slow moving water will. Turn off the waterfall before freezing conditions occur and remove the pump. This is done by unscrewing the check valve from the 2" flex pipe and pull the pump from the snorkel. For long-term storage keep the pump in the basement or area that does not freeze. Place in a bucket of water to keep the seals moist.

As always, if you have any questions, please call Johnson's Landscape Services at 943-6886.